

Mr. Winter Walk-in Coolers & Freezers

Flush Door Hinge Adjustment Instructions







 
Flush Door Hinge Adjustment


DIRECTIONS

- Remove acesscover by depressing point "A" and pulling it outward.
- 2. Loosen 4 mounting screws on each strap, but do not remove screws.
- 3. Open door to break seal with magnetic gasket.
- 4. Adjust tip of door up by turning top hinge adjustment screw clockwise (opposite for left-hand door), and the bottom hinge adjustment screw counter-clockwise (opposite for left-hand door). Continue adjusting until door spacing is even.
- 5. Tighten 4 mounting screws on each hinge.
- 6. Replace cover by inserting point "A" first.

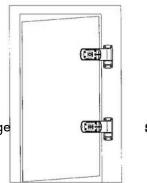

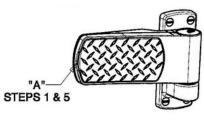




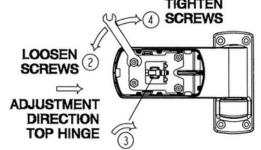


TOP HINGE

TURN CLOCKWISE FOR RIGHT-HAND DOOR TURN COUNTER-CLOCKWISE FOR LEFT-HAND DOOR

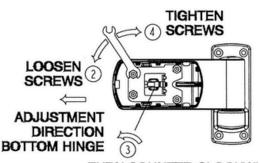

BOTTOM HINGE

TURN COUNTER-CLOCKWISE FOR RIGHT-HAND DOOR TURN CLOCKWISE FOR LEFT-HAND DOOR

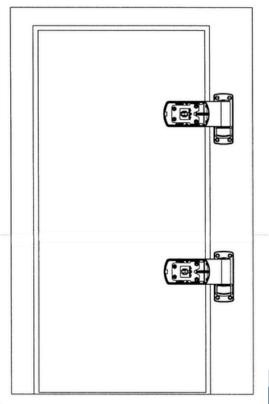



800-327-3371 www.mrwinterinc.net